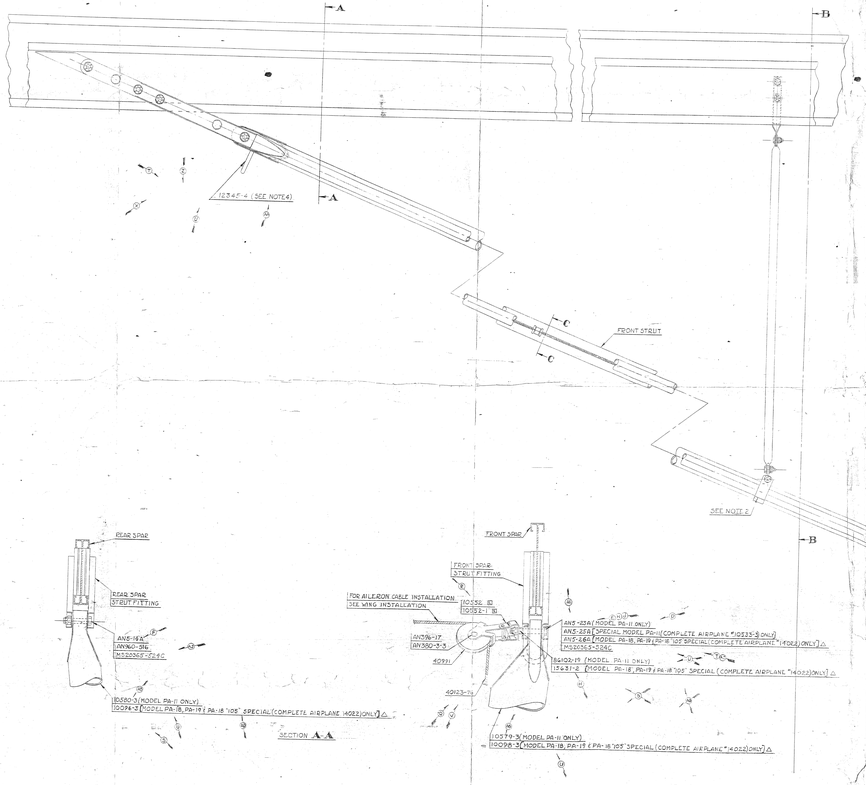
A
B
12345-4 (SEE NOTE 4)
C
FRONT STRUT
SEE NOTE 2
REAR SPAR
REAR SPAR STRUT FITTING
AN5-16A
(W)60-24
MS20600-2080
10580-3 (MODEL PA-11 ONLY)
10098-3 (MODEL PA-18, PA-19 & PA-18 '105' SPECIAL (COMPLETE AIRPLANE "4082") ONLY) △
SECTION A-A
FRONT SPAR
FRONT SPAR STRUT FITTING
10092-1 RH
10092-2 LH
FOR AILERON CABLE INSTALLATION SEE WING INSTALLATION
AN3-12A (MODEL PA-11 ONLY)
AN5-20A (SPECIAL MODEL PA-11 (COMPLETE AIRPLANE "10235-3" ONLY)
AN5-24A (MODEL PA-18, PA-19 & PA-18 '105' SPECIAL (COMPLETE AIRPLANE "4082") ONLY) △
AN364-1237
AN960-12
MS20365-1232C
2 REQ.
AN364-1237
AN960-10
MS20365-1032C
2 REQ.
AN364-1237
AN960-10
MS20365-1032C
2 REQ.
AN364-1237
AN960-10
MS20365-1032